TickTime

Ticktime Cube User Manual



Type-c

Thank you for ordering Ticktime Cube!

If you have any questions during use, please do not hesitate to contact us.

Our professional customer service team is always ready to solve any problems for you!

Customer Service: service@ticktime.store

Ticktime Official Online Store: https://www.ticktime.store

Color Options for Ticktime Cube: Black / White / Yellow / Blue / Pink

Product specification

Charging current:: 0.5A (Max) Charging time: 2~3H Battery capacity: 550mAh Continuous use time: 25 hours Standby time: 180 days Charging: TYPE C charging, supports PD charger

-01-

 
Product Description



Front display screen

- 02 -

Product Description



Back display screen

- 03 -

- ① Type-C charging port
- ② Vibration mode
- ③ On/Off button; Pause/Start button
- (Short press the button to turn on/off; tap to pause/play)
- 4 Volume button V (Short press to switch between volume adjustment, silent mode, vibration
- ⑤ Battery power display
- © Countdown digital display

- 04 -

7 Volume (three-level volume adjustment) display

- ® Silent mode
- M+button (increase by 1 min each time)
- 10 S+button (increase by 1 second each time)

- 05 -

- 11) Timing digital display
- [®] Sound hole

On/Off

I. Power on

Short press the power button to turn on the timer.

II. Power off

- 1. Short press the power button for 1.5 seconds to turn off.
- 2. After the countdown, the timer will enter standby mode in 15 seconds, and it will automatically shut down after 5 minutes if no operation.

- 06 -

3. During the timing process, if the front display screen is facing upwards, it will automatically shut down after 10 minutes if no operation.

Instructions

I. Countdown instructions

1. Fast countdown:

Place any number side up, it will enter the countdown mode.

- 07 -

Available time: 1 minute, 3 minutes, 5 minutes, 10 minutes.



5-minute countdown starts

- 08 -

Tap the fingerprint icon on the number 5 side three

times, the 20-minute

countdown starts.

2. Custom countdown:

Place the front display screen up, press the M+ button and the S+ button to adjust the minutes and seconds respectively, short press the M+ button or S+ button to increase the time by 1 unit each time; long press the M button or S button to increase the time by 5 units each time. After the setting is completed, place any number side upward to start the countdown.

- 09 -

- 3. Touch countdown setting:
- ① Place any number side up, tap the fingerprint icon, and the time will be increased in multiples of the current number. As shown in the following table: For example, when the number 5 is facing up, tap the fingerprint icon 3 times, the countdown will be 20 minutes, and the countdown starts.

- 10 -

	Tap time Display time	Long press for 1.5 s	1	2	3	4	
	Number side 1	60min	2min	3min	4min	5min	
	Number side 3	15min	6min	9min	12min	15min	
	Number side 5	25min	10min	15min	20min	25min	
	Number side 10	45min	20min	30min	40min	50min	

② The maximum adjustable time is 6 times of the number side.

For example: When the number 5 is facing up, the maximum count continue to tap the fingerprint icon, the countdown will be cycled from 10, 15, 20, 25, and 30

> -11-- 12 -

4. Pomodoro technique setting

① Introduction:

One pomodoro is 30 minutes, work for 25 minutes, and rest for 5 minutes; The countdown will stop after 4 pomodoros.



Pomodoro Work for 25 minutes Rest for 5 minutes

3rd Pomodoro Rest for

Pomodoro

Work for 25 minutes Rest for 5 minutes



- 15 -

II. Instructions of timing

1. Fast timing:

Place the back display screen up to start timing; Flip over to the front display screen to pause and see the timing.

Timing begins



2. Custom timing:

Turn on the timer, place the front display screen up, showing 00:00. Press the on-off button to start the timing; press the on-off button again to pause the timing.

III. Instructions of the memory function

After the timer is turned on, place the front display screen facing up short press the M button or S button, it will display the custom

- 17 -

time set last time, if you need to use this time, place any number side facing upwards to start the countdown;

If you need to reset the time, short press the M button or S button to clear it and reset the time.

IV. Instructions of volume adjustment

Short press V button to switch between volume, silent mode, vibration mode.

- 18 -

Three-level volume adjustment (high, medium and low).

V. Instructions of battery charging

Connect the charger, the timer will automatically shut down, and start charging.

The battery icon will flash while charging, and it will stop flashing when fully charged.

- 19 -

VI. Beep (total duration 30 seconds)

When the countdown is over, within 1-10 seconds, slow speed beep; within 11-20 seconds, medium-speed beep; within 21-30 seconds, highspeed beep and then stop beeping; During the beep, flip the timer to stop the beeping.

- 20 -