

1080P Mini Projector USER MANUAL

WINDELE



MODEL:M8

✉ support@windele.com

🌐 windele.vip

📞 1-833-666-4832

CUSTOMER SERVICE & WARRANTY

Thank you for choosing WINDELE M8 Mini Projector and becoming our valued customer. At WINDELE, we are committed to providing you with products that improve your daily life. Happy customers' experiences make us proud and we hope this product will bring you convenience and enjoyment.

WINDELE offers a 1-year warranty +30 days return/exchange policy + lifetime support for this product. We will provide the best service for our brand's customers.

If you don't like it,
If you have a user manual problem,
If you have missing accessories,
If your package got damaged,
If the product can't be used,
If you have any questions or feedback,
If you want to extend the warranty for 1 more year,
Please contact our brand support team at

✉ support@windele.com

🌐 windele.vip

☎ 1-833-666-4832

In order to help you solve the problem efficiently,
Please send us the following information when you contact us.

*Amazon order number

*A brief description of the problem: problem +the efforts you tried +photos/video

CONTENTS

Customer Service & Warranty	02
Attentions.....	03
Packing List.....	03
Projector Overview.....	04
Remote Control.....	05
Quick Start	07
Hdmi Connection.....	07
Connect To A Laptop	07
Connect To Ios Device	08
Connect To Android Devices	12
Bluetooth Speaker Setup	16
Connection To Dvd Player	18
USB Connection	21
AV Connection.....	23
Specification.....	24
Troubleshooting.....	25

 
ATTENTIONS

1. Please DO NOT look straight into the projector lens while it is working to avoid burning your eyes.
2. Do not place the machine in a hot or humid place to avoid damage to the internal components.
3. When cleaning up the lens, please use a lens cleaner or special lens wipe paper.
4. Please ensure that the projector is well ventilated when using it. Do not touch carpets and woolen knitwear.
5. Do not disassemble this machine. We will offer you professional warranty services.

TIPS:

Recommended


Video,
Movie

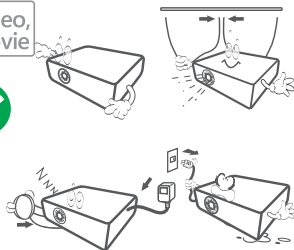


NOT Recommended



 PowerPoint,
Excel, Word

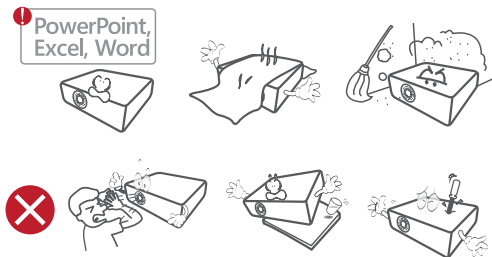

PACKING LIST

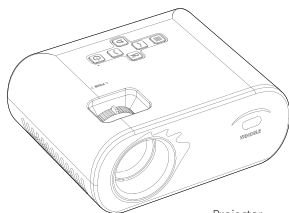 

Projector



Remote
(Batteries Not Included)



Power Cord



 
User Manual



AV Cable




HDMI Cable

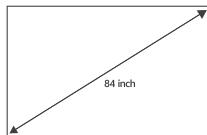

Screen

 
PROJECTOR OVERVIEW

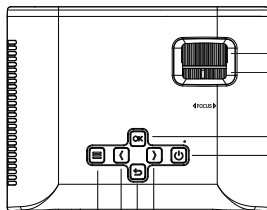

Menu
Right
Return
Left


Focus Ring
Keystone
Trapezoid Correction

 OK
Power

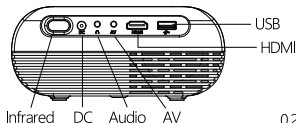


Infrared DC Audio AV

 USB
HDMI

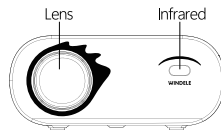


Lens
Infrared

 0.25in Mounting Screw Hole

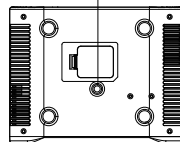

REMOTE CONTROL

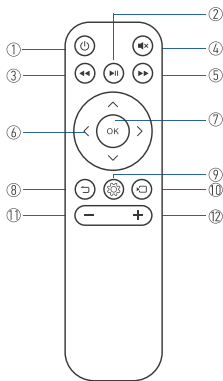 

1.Power On/Off

2.Pause/Play

3.Rewind

4.Mute

5.Fast Forward

6.Left/Right/Up/Down

7.Confirm

8.Return

9.Menu

10.Signal


11.Volume -

12.Volume +


CAUTION

1. Do not submerge the remote control in the water.
2. Do not expose the remote control to the outdoors, liquid, moisture, excessive heat, or fire.
3. Do not use old and new batteries together in the remote control.
4. Please take the batteries out if not using the remote control for a long time to avoid battery Leakage.
5. The remote control must be held perpendicular to the projector's IR remote sensor to function correctly.


QUICK START

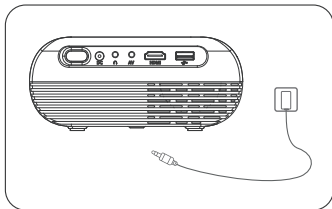


- ❶ Plug the power cord into the outlet.

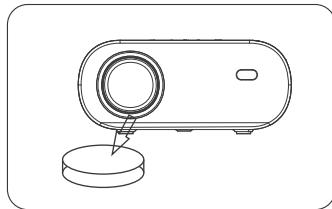


- ❷ Take off the lens cover.

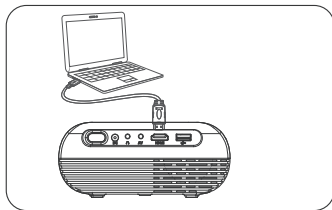


- ❸ Connect your device to the projector with the correct cables.

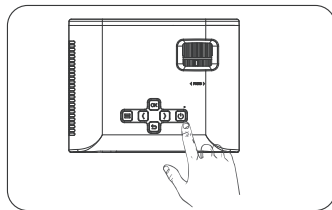


- ❹ Press the power button to turn on the projector.

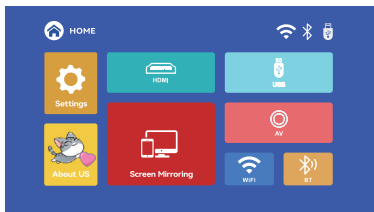


- ⑤ Select the correct input source on the projector or remote to project your device.

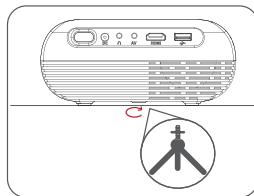

- ⑥ Adjust the kickstand accordingly.

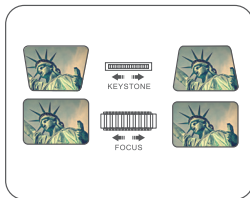

- ⑦ First adjust the keystone to make the projection image rectangular, then slowly adjust the focus wheel to make the center clear. (Please use it in a dark environment.)

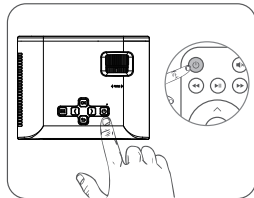


- ⑧ Press the power button to turn off the projector

Connections instructions

The M8 projector can be connected to a variety of devices. Please prepare the corresponding adapter before connecting different devices.

HDMI Connection


Use the HDMI slot to connect computers and HDMI-compatible devices. Once connected, select the HDMI signal source.

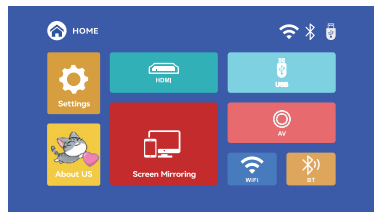

CONNECT TO A LAPTOP


1. Windows Laptop

 To connect Windows laptop, please use the HDMI cable (included). Most Windows laptops support HDMI connection.

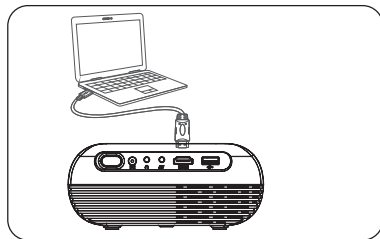

2. For MacBook

To connect the MacBook, you can use an Apple MFi-certified USB C to HDMI adapter or an Apple MFi-certified Thunderbolt to HDMI adapter.

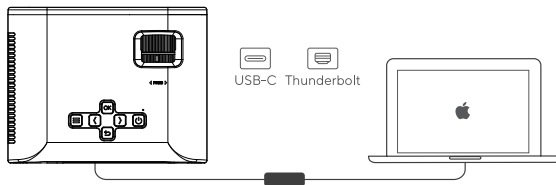

CONNECT YOUR IOS DEVICE

there are two ways to connect your iPhone/iPad: wireless and wired.


1、Wireless: Wireless WiFi Connection

Note:


- ① The fluency of scrambling wirelessly is related to the network environment. We recommend screen-mirroring with wireless in a stable environment. A bandwidth of 100Mbit or more is recommended when using screen mirroring.
- ② For fluency and stability when connecting wirelessly because it is a smartphone, it is recommended to use the equipment within 1m of the projector. In the case of the ceiling, it is recommended that the distance between the phone and the projector is not too far.
- ③ Not all smartphones support this feature. Make sure it is supported before using.
- ④ If you have any questions, please feel free to contact us at support@windele.com.

2. Wireless Wifi Connection With IOS Devices


Connect To WiFi

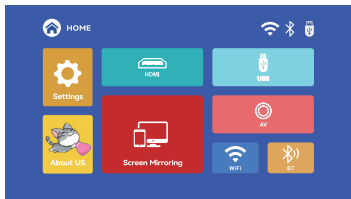


- ① On the home screen, <WiFi> Select the menu.

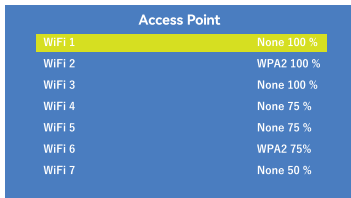

- ③ Choose your own wifi.

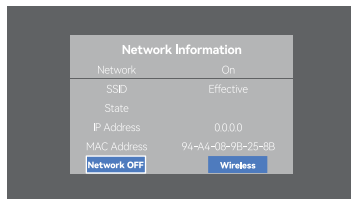

- ② <Wireless> Click the button.

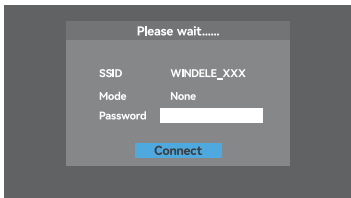


- ④ Enter your home WiFi password and then connect.

Note: once you have entered your Password, click the  keyboard.

Screen Mirroring




① On the home page, select <Screen mirroring> menu.

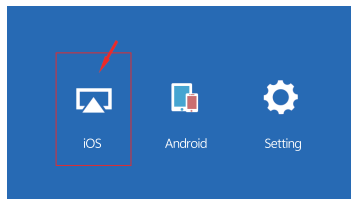

② Select the < iOS > system.



③ Please follow the screen instructions on the projector.

Note: Go to Settings on your iOS device and turn on the Wi-Fi feature →  Connect your iOS device to the same WiFi as your projector.

 
- ①. Open Control Center on your iOS device. Select the Screen Mirroring function.
- ②. Click "WINDELE-xxx" to enter the image.
- ③. When the connection is successful, the image of the smartphone will be displayed on the projector.

Wired Connection To iOS Device

If You Have Any Questions About The Connection Method, Please Contact support@windele.com. Provide Operation Guide Or Operation Video.


1. With Apple Lightning Digital AV Adapter

Please use an official HDMI to Apple Lightning Digital AV Adapter from the Apple store (not included).

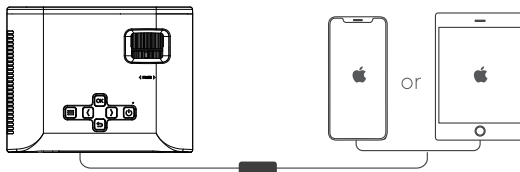

2. With a Miracast/Dongle

Miracast is designed for mirroring a smartphone, tablet, or PC's screen to a bigger screen. You can use a Mira cast/Dongle to realize the wireless connection.

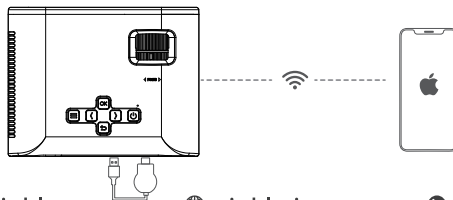


CONNECT TO ANDROID DEVICES

There are both wireless and wired ways to connect to Android devices.


1、Wireless: Wireless WiFi Connection

NOTE:

 
- ① The fluency of scrambling wirelessly is related to the network environment. We recommend screen-mirroring with wireless in a stable environment. A bandwidth of 100Mbit or more is recommended when using screen mirroring.
- ② For fluency and stability when connecting wirelessly because it is a smartphone, it is recommended to use the equipment within 1m of the projector. In the case of the ceiling, it is recommended that the distance between the phone and the projector is not too far.
- ③ Not all smartphones support this feature. Make sure it is supported before using.
- ④ If you have any questions, please feel free to contact us at support@windele.com.

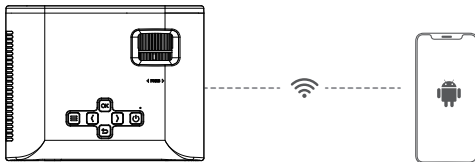


Android Screen mirroring

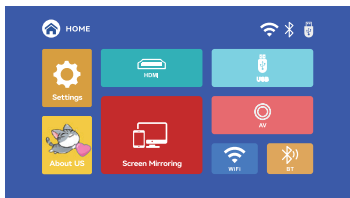

❶ On the home page, select <Screen mirroring> menu.


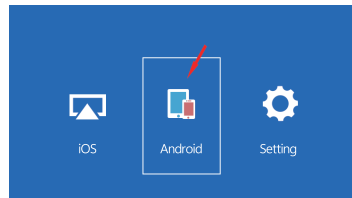


❷ Select the < Android > system.

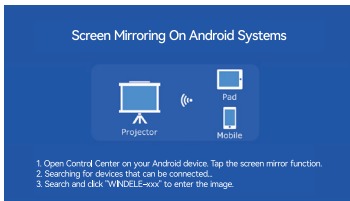

❸ Make sure that the Android device is connected to the same network as the projector.


- ① Turn on WIFI on your Android device.
- ② Launch the "multi-screen" function on your Android device and search for the projector.
- ③ Select "WINDELE-XXXXXX" from the search results and connect.

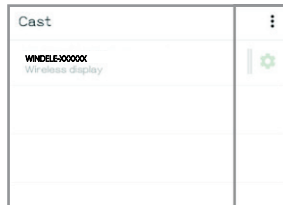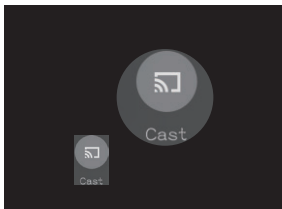

NOTE: For compatibility reasons, some Android devices may not have screen mirroring.

NOTE: Please refer to the pictures below as an example.

The display of the smartphone screen depends on the model and Settings.

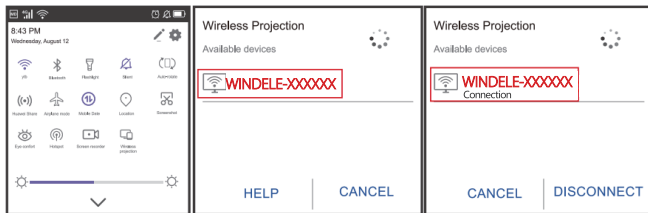

NOTE:

 
- ① The button of the [screen mirroring] function of the smartphone can be used to display "multi-screen", "/ wireless display", "/ WLAN display", "/ screen mirroring" or "smart view". I do.
- ② Not all Android smartphones support this feature, usually support Android 8.0 and above smartphones. Make sure it is supported before using.

2、Wired: Miracast or HDMI switching adapter is required


You can use Miracast/dogle to connect to your Android phone.

Alternatively, connect with an HDMI switching adapter.


Note: Please confirm whether the mobile phone you are using has screen mirror function.

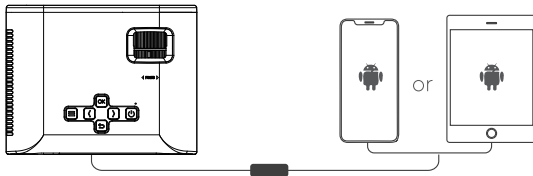


Bluetooth Speaker Setup

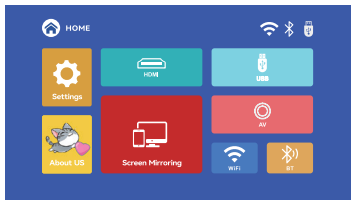

① Select the BT menu on the home page.

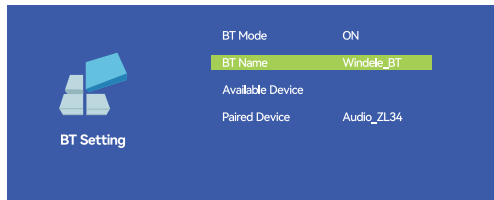

- ① Put [BT Mode] that's it. Open the Bluetooth device you want to connect to.
- ② Click [Available Release] to start/stop searching for nearby Bluetooth devices.

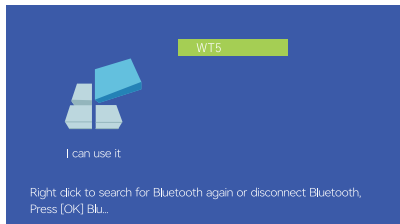




Note: Right click on the remote to search for Bluetooth devices.

- ③ Select the Bluetooth device you want to connect to, press OK, and wait a few seconds for the Bluetooth connection to succeed.
- ④ After finding the corresponding Bluetooth device, press the OK button and wait for a few seconds for the Bluetooth connection to succeed.

NOTE:

- ① Only Bluetooth headsets and Bluetooth speakers can be connected, but Bluetooth keyboards and Bluetooth phones cannot be connected.
- ② Bluetooth function can only support MP3 and AAC audio form, other forms of audio can not play or play with Bluetooth has no sound.
- ③ Please place the Bluetooth speaker you want to connect near the projector. If the Bluetooth speaker cannot be searched, please restart the Bluetooth speaker.
- ④ Please feel free to contact support@windele.com if you have any questions.

Airpords: Open Airpords and long press the button behind it for 3 to 4 seconds to search for Airpords and connect

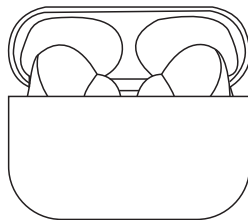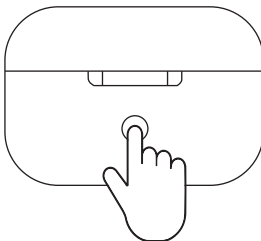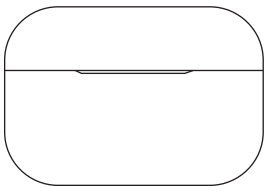

CONNECTION TO DVD PLAYER


NOTE:

In the case of no sound connected to the TV recorder, some videos cannot transmit signals to the outside for copyright protection. Video <Sound mode >


Please change to PCM mode.

Use the supplied 3-in-1 AV cable

- ① Power on the DVD player and projector.
- ② Using the 3-in-1 AV cable in the package, connect the colored mesco connector to the RCA cable of the DVD player.
- ③ Connect the black connector to the AV port of the projector and go to the home page to select the [AV] signal source. Or use the included HDMI cable to connect to a DVD player.

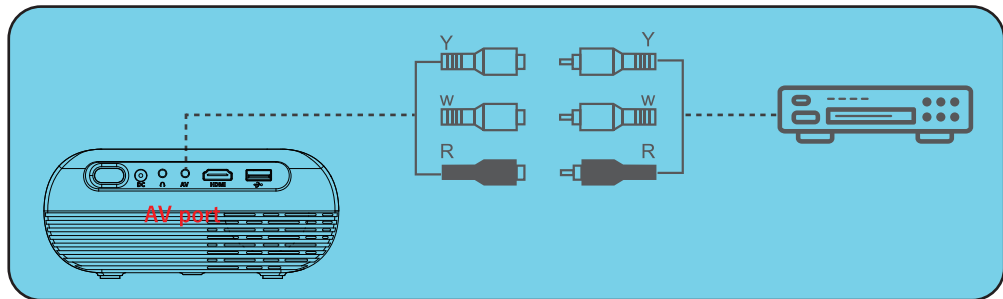

Or use the included HDMI cable to connect to a DVD player.

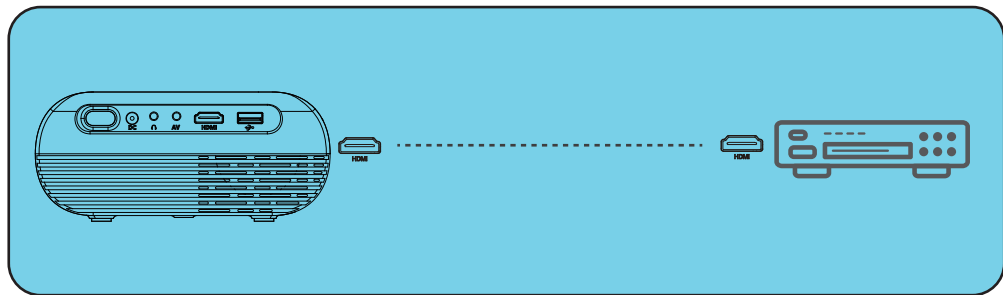

External Speaker/Soundbar Connection

 
To connect with headphones/wired speakers, a 3.5mm audio cable is used as shown below to connect the projector to headphones/wired speakers.

NOTE:

A condition in which there is no sound from an external device

Reason: Some PIDs in the Netflix app and prime video app cannot transmit signals externally due to copyright protection.


Solution: To protect copyright, some Pidio can't transmit signals. Please change the sound mode of the video to PCM mode.

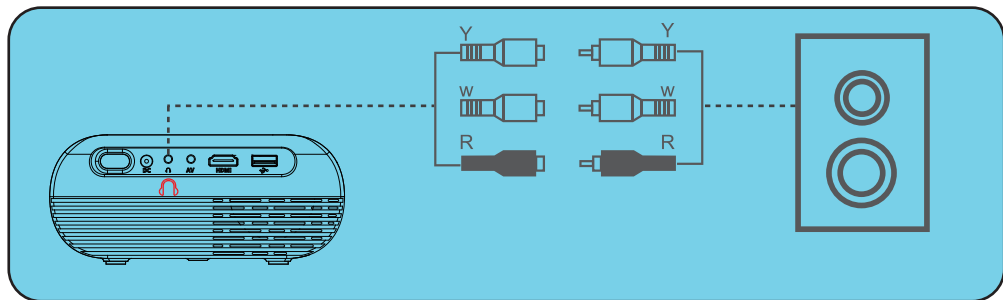

USB CONNECTION


Step 1

 Insert the USB key into the USB slot.

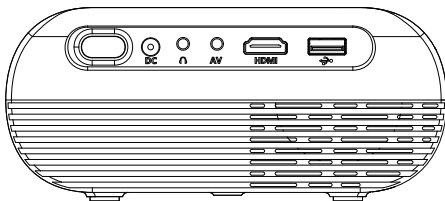


Step 2

 Select the source (photo, music, movie, text) to play.

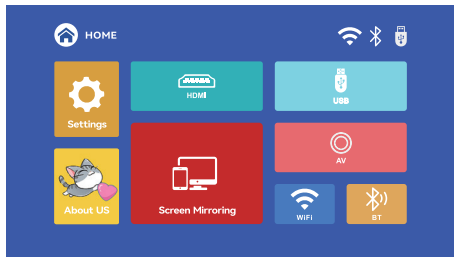

Step 3

 Select Play File.

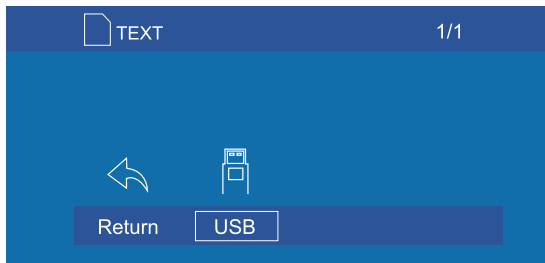


* Support Multimedia Formats

Multimedia	Audio Files	MP3,WMA, OGG, AAC, MA4, FLAC, APE, WAV
	Photo Files	JPEG, BMP, PNG
	Video Files	MPEG1, MPEG2, FLV, MPEG6, RM,AVI, RMVB, MOV, MKV, DIVX, FVOB,M-JPEG (ONLY unsupported 640*480)
	Text Files	TXT

AV CONNECTION

 
The projector was connected using a 3-in-1 AV cable as shown below. Once connected, the AV signal source is selected.

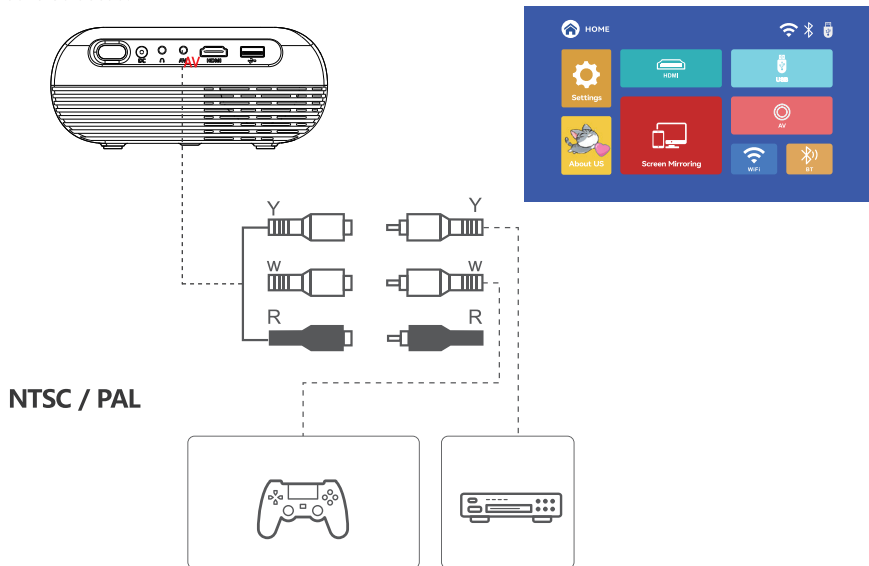

SPECIFICATION

Imaging technology	LCD
Wright	LED
Support video resolution	1080P, 1080i, 720P, 576i, 480P, 480i
Lens life	>50000 Hours
Focus	Manual
Keystone	Vertical ± 15 degrees
Supported video formats	AVI/TS/TP/MOV/DAT/MPG/MPEG/MKV/3GP/MP4/VOB/M2TS/ XVID/3GP2/MPEG1/MPEG2/MPEG3/MPEG4/H263/H264/H265/ VP8 /RV30/RV40
Input	USB*1, HDMI*1, AV*1, DC*1
Output	3.5mm jack
Input voltage (V)	DC 19V-21V 2.28A, 50/60Hz
Power consumption (W)	operating 43w
DC Adapter Input	48W
Length of adapter cable	1.5 m
Projector size	154mm* 116mm* 72mm
Weight	0.47 kg

 Projection distance and size (1.5m~3m recommended)

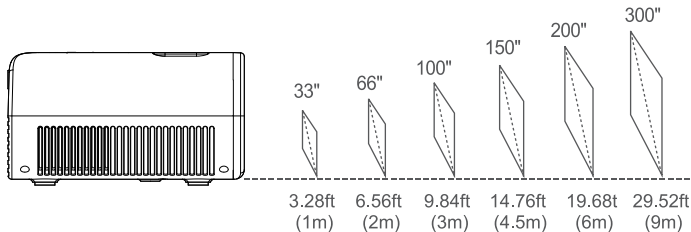

TROUBLE SHOOTING

■ Q: There is no sound when playing Netflix videos?

A: Due to copyright reasons, some videos or streaming software(e. g Netflix, Disney+,Hulu, etc.) themselves do not support Screen Mirroring. This is a common phenomenon in the market.

*HDMI connections help FUDONI Spare-P2 projector on this issue:

- ①For iPhone, you can use an Apple Lightning Digital AV Adapter. Most streaming software works well via this adapter.
- ②For fire stick, Roku, and Chromecast, streaming software will also work well.
- ③Connect the PC or laptop via the HDMI cable.

■ Q: The Power doesn't work

A:

- (1) make sure that the power cable is properly inserted.
- (2) remove the lens cover and press and hold the power button for about 3 seconds.
- (3) if it cannot be repaired by the above method, please contact after-sales service. We will exchange a new one.

■ Q: The Power goes off during use

A:

- (1) did you set "auto off" in the timer menu to "on (select time)"? Did you set the "power off time" to "on (select time)"?
- (2) check if the plug of the power cable is properly inserted. (3) is the projector ventilated off?
- (4) voltage is not stable.
- (5) has it been running for a long time, causing overheating protection system?

■ Q: I can't get the footage.

A:

- (1) have you chosen the correct input source?
- (2) is the cable of the input terminal connected correctly? If that doesn't help, try reset.

■ Q: I can't hear the sound when I connect to the TV recorder.

A:

- (1) please change the dolby mode of the video to PCM mode due to copyright.
- (2) some videos in Netfflix app or prime video app cannot transmit signals externally due to copyright protection (HDCP consultation).

■ Q: Connect to a Bluetooth device and it does not make a sound.

A:

- (1) Please confirm whether the projector is supported by the playback file.
- (2) Please confirm whether the entity software has been upgraded? If you do not know the method of software upgrade, please consult the after-sales service.

■ Q: Cannot mirror with smartphone.

A: Connect the iOS device to the WiF of the projector.

Please mirror the screen in a stable environment.

Please restart the smartphone and projector.

■ Q: Unable to connect Bluetooth

A: Please place the Bluetooth device near the projector. Please restart the Bluetooth and projector devices.

■ Q: There was no sound.

A: In order to protect copyright, some videos cannot transmit signals to the outside world. Video sound mode

- (2) Please change to PCM mode.
- (2) Adjust the volume with the remote control.
- (3) Make sure you're in etiquette mode.
- (4) Please try the u disk, music, etc., to confirm whether it is the problem of the video (input source).

■ Q: How to upside down the picture?

A: Please go to Menu > Setting > Rotate to flip the projection picture as your needs.

■ Q: Why isn't the projector bright enough?

A: Because this product is a home projector, please use it in a dark environment.

■ Q: Why is the image blurry?

A: Is the lens focused correctly?

Is the Angle between the projection screen and the machine set correct?

Does the projection distance exceed the focus range?

Make sure the projection lens is dirty.

The most appropriate projection distance is 1.5m to 3m.

Please adjust the key stone and turn it into a rectangular display. Slowly turn the focus dial to adjust the focus.

■ Q: There was no sound.

A: In order to protect copyright, some videos cannot transmit signals to the outside world. Video sound mode

(1) Please change to PCM mode.

(2) Adjust the volume with the remote control.

(3) Make sure you're in etiquette mode.

(4) Please try the u disk, music, etc., to confirm whether it is the problem of the video (input source).

■ Q: Image warping

A: Is it set up correctly?

If the distortion is trapezoidal, do trapezoidal correction.

The top or bottom length of the image (trapezoidal distortion)

Is the projector positioned as perpendicular to the screen as possible? Please use the solid key ring to correct the trapezoidal distortion.

■ Q: The power cut off in use

A:

1. When the projector is used continuously for a long time, it will automatically start the overheating protection. Wait 10 minutes or so to restart automatically.
2. Please confirm whether the plug of the power cable is inserted properly.

■ Q: Cannot be operated with the remote control

A: Is the remote control sending part of the remote control facing the light receiving part of the remote control of the host?

Did the remote control battery drain? Please replace the batteries with new ones.

Is there an obstacle between the remote control and the light receiving part of the remote control of the host?

Not beyond the effective range of the remote control.

■ Q: How is the image scaled (shrunk)?

A: The projector's picture can be reduced to as little as 50%.

Go to the Home Page Settings, then in the Photo interface < zoom mode > Click, as per your request Can reduce the size of the hand screen.

Note: When the screen size is reduced, the size of the main screen and the set screen are unchanged, and the size of the animation screen is reduced.

Precautions for safe use (Please be sure to follow)

- Please do not open or remove the cover of this product.
- Please do not touch the product or cable with wet hands.
- Please avoid liquid, metal and other foreign matter into the product.
- Please do not place this product in humid places, direct sunlight, dust and soot, car and heating equipment and other high temperature places.
- Please do not cause strong vibration or shock to this product.
- Please do not overlap this product and do not place heavy objects on this product.
- Please do not set or store this product in an unstable place.
- When unplugging the cable of this product, be sure to hold the connector part and do not apply excessive force.
- When purchasing this product, please do not use products containing volatile organic solvents such as benzene and diluents.

WINDELE

Learn more about WINDELE, Please visit us at:

windele.vip



And

Support online chat



✉ support@windele.com

🌐 windele.vip

☎ 1-833-666-4832

