

WINDELE

10 IN 1 ELECTRIC SPIN SCRUBBER



User Manual

Model:GH1005

✉ support@windele.com

🌐 windele.com

☎ 1-833-666-4832

CUSTOMER SERVICE AND WARRANTY

Thank you for choosing the WINDELE Electric Spin Scrubber. We are committed to providing you with the best product quality and service. We hope this product brings you and your family a clean and pure life.

WINDELE offers a 1-year warranty + 30 days return/exchange policy + lifetime support for this product.

If you don't like it,
If you have a user manual problem,
If you have missing accessories,
If your package got damaged,
If the product can't be used,
If you have any questions or feedback,
If you want to extend the warranty for 1 more year,
Please contact us by Amazon or our brand support team.

✉ support@windele.com

🌐 windele.com

📞 1-833-666-4832

We will provide the best service for our brand's customers.

In order to help you solve the problem efficiently, please send us the following information when you contact us.

*Amazon order number

*A brief description of the problem: problem + the efforts you tried + Photos/Video

CONTENTS

Safety Instructions	01
Product Introduction	02
Product Parameters	02
Package Contents	03
Suggestions for Use of Accessories	04
How to Use	05
How to Charge	06
How to Clean	07
Trouble Shooting	08
FCC Statement	11

IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INFORMATION AND INSTRUCTIONS FOR FUTURE REFERENCE.

Safety Instructions

Caution: when using electrical appliances, basic safety precautions should always be followed , including the following:

1. Do not operate this product near flammable and explosive substances.
2. Please check if the brush head is firmly installed before use, do not shake or swing the product violently.
3. When using this product with irritating substances, please wear eye protection and gloves to prevent the splash of dirt on the human body.
4. Do not insert any accessories when the machine is in operation.
5. The waterproof grade of this product is IPX8, and it can be soaked in water.
6. Do not attempt to remove the battery under any circumstances. If the product shell is broken, stop using it and do not charge it.
7. Please keep away from heat, oil or flammable and explosive substances when charging.
8. Use the USB charging cable that comes with the product to charge the product. when charging the product, the input charging voltage cannot exceed 15% of the rated voltage.
9. Please use an adapter with security certification that matches this model of device.
10. This product uses a built-in battery that cannot be removed. Please do not replace the battery by yourself to avoid damage the battery or the device. If charging is complete , please disconnect the charger from the device and remove the charger from the power socket. The continuous charging time should not exceed 12 hours.

Product Introduction

This product is a hand-held electric cleaning brush, mainly used for cleaning household surfaces. The working principle is to use the motor to drive the brush head to rotate, so as to wipe off the stains on the surface that needs to be cleaned.

 
Main features:

- 1. Multiple brush heads, easy to install , different brush heads are suitable for all kinds of places that need be cleaned.
- 2. The main engine of the brush is made of environmentally friendly plastic material, which is durable , environmentally friendly and comfortable; the telescopic tube is made of stainless steel.
- 3. Rechargeable and recyclable; low-voltage operation makes the product safer.


Product Parameters

Adapter parameters	Input AC100-240V/50-60Hz Output DC5V
Input rated voltage	DC5V
Running time after fully charged	Approx.90-120min
Charging time	≤5H
MINI handheld	Approx.22cm
Lengthen approx	79cm &103cm
Built-in lithium battery	3.7v/2600mAh
Waterproof Grade	IPX8


Package Contents

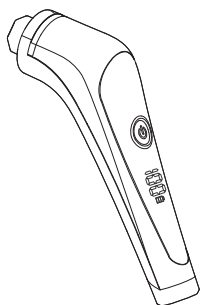

Spin Scrubber

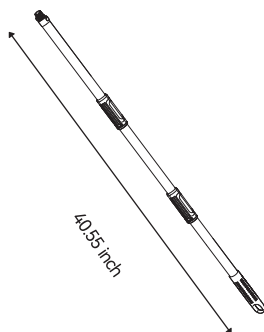 

Extension Rods

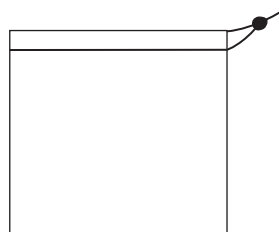 

Storage Bag



Pointed Brush



Small flat Brush



Curved Brush



Flat Brush



Large sponge brush



 
Polishing cloth




WooHike brush




Sponge Cloth Brush




Scouring Pad

 

Velcro Brush Holder

 

Portable Hook

 

47.2 inch
USB-C Cable

Suggestions for Use of Accessories



Pointed Brush

The small flat brush is suitable for cleaning bathtubs, sinks and washstands



Small Flat Brush

Which can be used to clean larger areas, such as bathtubs, floor, stove, wall, glass



Flat brush

Pointed brush head ideals for cleaning smaller areas such as corners, gaps, crack and other corners more difficult to clean



Stainless Steel Brush

Brushing pots, bowls, plates, sinks, etc



 
Large sponge brush

Suitable for waxing floors , cars, furniture, etc



Polishing Cloth

Use for polishing



Scouring Pad

Suitable for cleaning stubborn stains on Wok, dish, smoker, BBQ and other surfaces



Wool-like Brush

Use for sofa , leather bag , leather Coat , car polishing



Sponge Cloth Brush

Use for sofa, leather bag, leather coat, car polishing

 
How to Use

1. Press ON/OFF for the first time, and the high gear of the machine will work, and the red light will be on;
2. Press ON/OFF for the second time, the low gear works, and the green light is on;
3. Press ON/OFF for the third time to shut down and turn off the light;
4. When the light flashing, it is lack of power;
5. The light shows red when charging, and turns green when fully charged.

How to assemble the brush heads?


Select the appropriate brush head according to the cleaning requirements.

Note: Before assembling any component of this product, make sure the unit is turned off, then make sure the brush head is firmly installed.

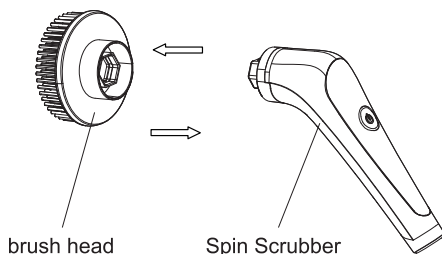

How to pull out the brush head?


Hold the connection part of the brush head and pull out vertically.

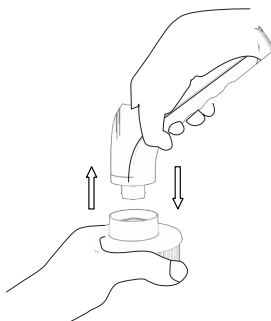

How to install the extension tube?


Pull out the silicone plug behind the host of the electric cleaning brush, screw the threaded end of the telescopic rod into the threaded hole of the host of the cleaning brush, twist until tightened.

Note: Make sure that the telescopic rod and the host are not loose before use.

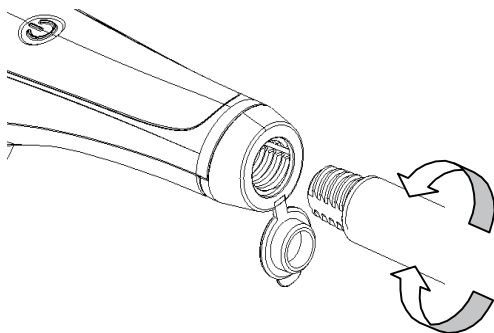

How to Charge

Open silicone charging cover and insert the USB for charging, make sure it is fully inserted. Next, plug adapter into electrical outlet.

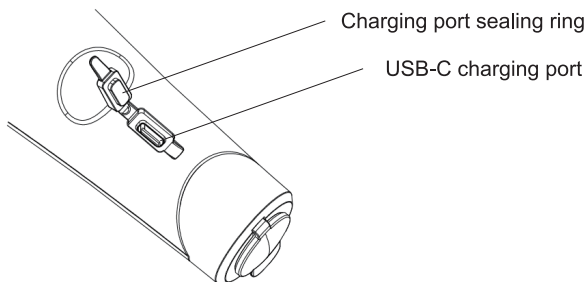

1. When the spin scrubber is being charged, the indicator will display Red color.
2. When the spin scrubber is fully charged, the indicator will display Green color.

Notice: please remove the adapter in time when fully charged , please make sure that the silicone cover is closed to avoid water entering.

How to Clean

Handle Part

Gently wipe handle part of the scrubber with a wrung soft cloth.

Brush Head

Disassemble the brush head and immerse it into the water to clean. Clean it with neutral detergent if it is difficult to clean. Brush Head can be soaked in water.

Cleaning tips

1. For better cleaning effect, it is recommended to use the brush with detergent (such as Mold and Mildew Remover, water strain Remover, oven cleaner, Bleach cleaner, All Purpose Cleaner). You could use different detergents for different needs.

2. For removing stubborn stains, please soak stains into water and detergent for a while, and then use the scrubber to clean , it will shorten your cleaning time.

Suggestion for storage

Store the scrubber in a ventilated and shade place. Avoid placing it in a wet place or being exposed to strong sunlight.

Trouble Shooting

Why doesn't the red indicator light while charging?

1. check if the USB cable was inserted to the bottom.
2. check if the charging socket is abnormal or power outage.
3. If the indicator light is green after plugging in the adapter, the product is fully charged, just turn it on to use.
4. If neither of the above two conditions, please contact us by Amazon or 7days*8hours brand service by brand Email or brand website chat: support@https: //windele.com or https: //www.windele.com

The charging indicator light doesn't turn to green after charging over 5 hours.

1. please check whether the socket and charging connection are loose , plug them tightly before charging.
2. If the product is immersed in water during use , it will damage the internal circuit and cause abnormal charging.
3. If neither of the above two conditions, please contact us by Amazon or 7days*8hours brand service by brand Email or brand website chat: support@https: //windele.com or https: //www.windele.com

Why does the brush head stop spinning while working?

1. The red light flashes for 30s and then stops, it may be that the user presses the brush head too hard to cause the product to stop automatically in the protection state. Only switch the ON/OFF button once or twice to return to normal.
2. If the red light keeps flashing and doesn't stop, it means that the product is in a low battery, and it needs to be fully charged before use.
3. If neither of the above two conditions, please contact us by Amazon or 7days*8hours brand service by brand Email or brand website chat: support@<https://windele.com> or <https://www.windele.com>

Why does the charging indicator turn green (representing a full charge) but the brush head does not spin after being turned on?

1. Please check whether the brush head is tightly connected with the extension rod and handle. For the connection method, refer to the installation guide.
2. If neither of the above two conditions, please contact us by Amazon or 7days*8hours brand service by brand Email or brand website chat: support@<https://windele.com> or <https://www.windele.com>

Why does the brush head spin less than 90 minutes or not work after pressing ON/OFF button twice when the battery is fully charged?

Each user will use different force during use. If you keep pressing the brush head too hard, the working time will be less than 80 mins. In order to prolong the use time, please don't press the brush head too hard, and frequently press it too hard will break the brush head.

Maintenance

1. If you do not use this product for a long time, please charge it at least once a month.
2. Waterproof grade IPX8, and the main engine can be cleaned with water. After use, please clean the body and tube with a dry cloth, wipe off the water and let it dry naturally.
3. Forbidden to cover strong corrosive liquid on the surface.
4. The DC hole is waterproof, please put back the silicone cover after charging.
5. Do not bake this product with high temperature fire.
6. After using the cleaning accessories, please let them dry naturally.

Warm Tips

1. Allow for transportation safety, the product you obtained is not fully charged please fully charge the product before first use.
2. Before using the scrubber, be careful not to get splashing stains into your eyes or on your skin.
3. When the battery is low the red indicator light will flash, please charge the product in time.
4. When charging , the red indicator light is on , If there is no red light, please plug the adapter correctly, then press the power button again.
5. Please close the silicone cover after charging to avoid water entering to cause the short circuit.
6. Please check whether there are any missing parts after receiving the product.
7. Please make sure that the scrubber is well-assembled before use.
8. Small scratches may occur when cleaning the surface of stainless steel, polished resin, artificial marble, wood, etc, please try to confirm beforehand. Please try it out in a small area and make sure that there are no abnormalities before cleaning.
9. Brushes are consumable which are not applicable to the warranty.

10. Please keep the power cord plug and hands dry to avoid the risk of electric shock.
11. Do not disassemble, repair or modify internal parts by yourself, please contact Us if you have quality problems.
12. Always use proper eye protection when using the power scrubber with irritating substances. Rubber gloves are also recommended.
13. When changing accessories, please make sure to turn off the machine first.
14. Keep the hair, cloth or other parts of your body away from brush head to avoid convolving

FCC Statement

Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected .
4. Consult the dealer or an experienced radio/TV technician for help.

Contact Us

If you have any questions or comments, please contact our customer care at any time and we will be able to assist your further. Thank you for choosing WINDELE electric spin scrubber.

WINDELE

Learn more about WINDELE, Please visit us at:

windele.com



Support Online Instant Chat



Model:GH1005

Made in China

 support@windele.com

 windele.com

 1-833-666-4832